



A comprehensive guide to:

- Display Assembly
 - Parts
- Shipping Supplies
- Supplemental Materials

Wire Floor Spinner 4 Sided Display

WIRE FLOOR SPINNER 4 SIDED DISPLAY

ITEM 4154

PARTS INCLUDED: (1) Base; (1) Spinner Tube; (2) Spinner Platforms; (5) Base Levelers; (1) Cotter Pin; (1) Bearing; (4) Pocket Assemblies; (4) Signs (Headers); Optional caster set (Item No. 4190)




STEP 1

Screw all 5 of the levelers into the bottom of the base.




STEP 3

With spinner platform in place, place the spinner tube onto the base tube making sure the clip fully engages.

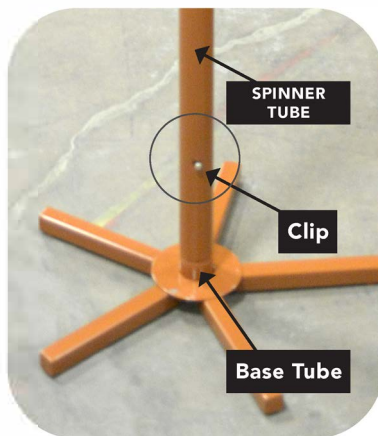

STEP 2

Insert spinner tube through the bottom spinner platform. Note orientation of the spinner platform. Raise the spinner platform up and fully insert a cotter pin into the indicated hole. Lower the spinner platform so that it rests on the cotter pin.

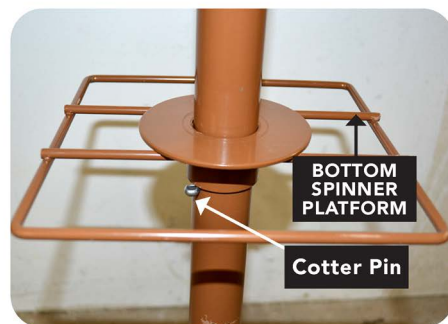


STEP 4

Place bearing on spinner tube washer



STEP 5

Rest top spinner platform on top of bearing. Note orientation of spinner platform.

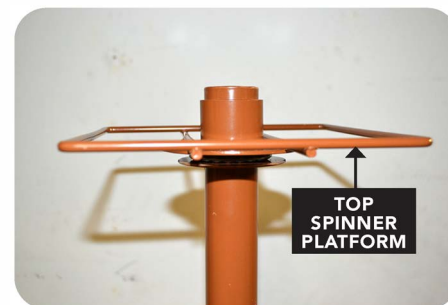

continued on page 00

WIRE FLOOR SPINNER 4 SIDED DISPLAY

ITEM 4154

continued from page 00





STEP 6

Drop the top hooks of the pocket assembly onto the top of the spinner platform. Repeat this step for remaining 3 hanging assemblies



STEP 7

Locate and remove cotter pin from lower spinner platform. Slide down spinner platform to catch on lower hooks of each pocket assembly.

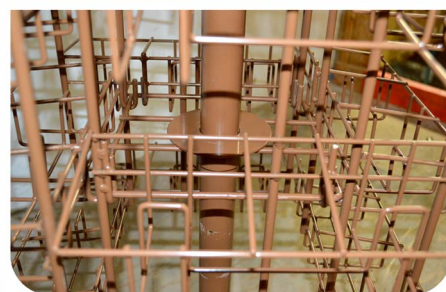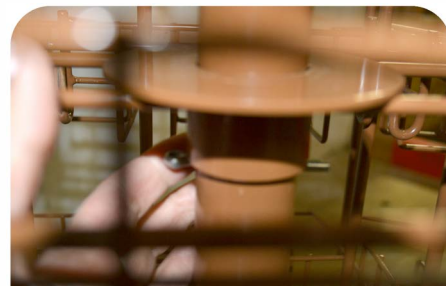

STEP 8


Place a sign (header) in slot on top pocket assembly. Repeat with 3 remaining signs. Display is now complete.




Example of completed Wire Spinner Display with headers and product




WIRE FLOOR SPINNER 4 SIDED DISPLAY

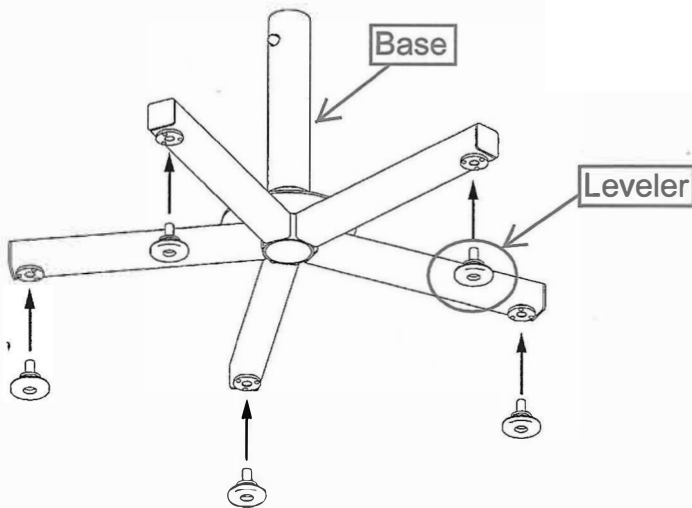


- ① Screw all 5 levelers into the bottom of the base.

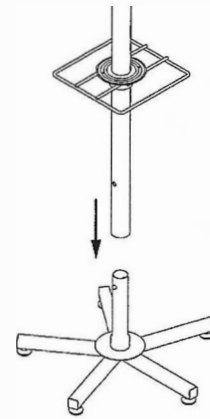

- ③ Place the spinner tube on the base tube making sure the spring clip fully engages.

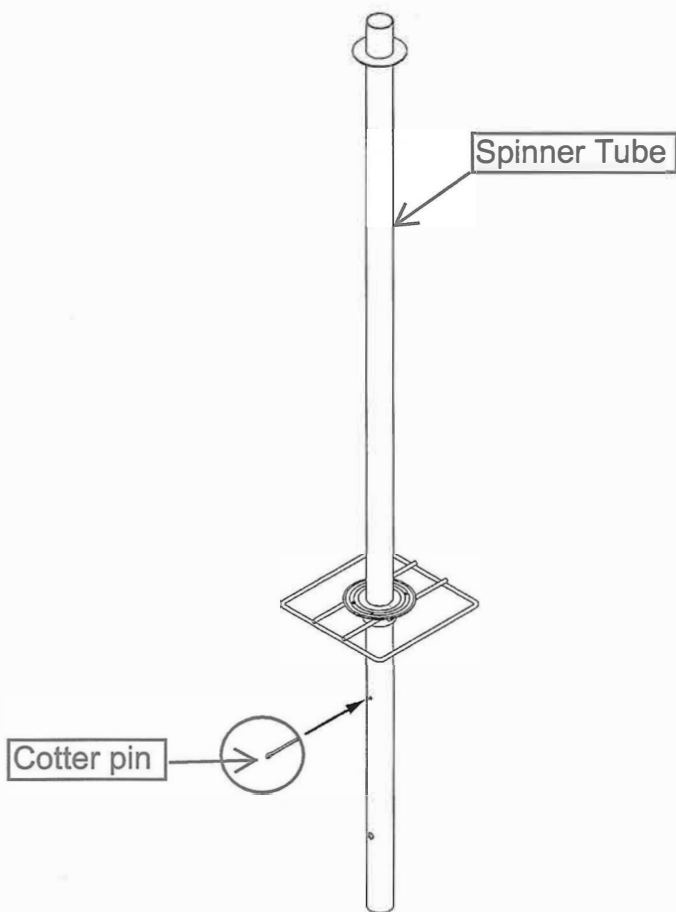


- ② Insert spinner tube through a spinner platform. Note orientation of spinner platform. Raise the spinner platform up and fully insert the cotter pin into the indicated hole. Lower the spinner platform so that it rests on the cotter pin.

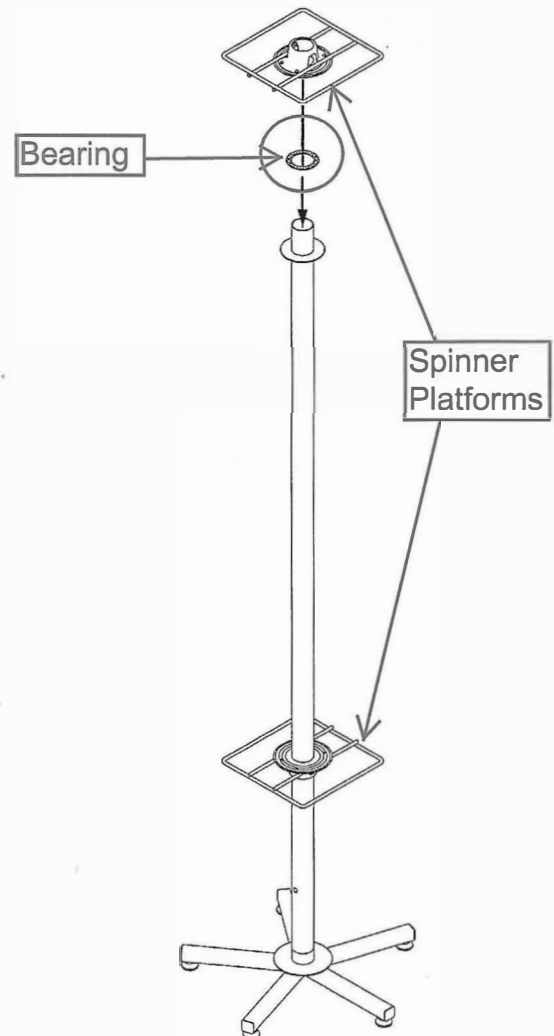


- ④ Place bearing on spinner tube washer and rest spinner platform on top of bearing. Note orientation of spinner platform.


WIRE FLOOR SPINNER 4 SIDED DISPLAY

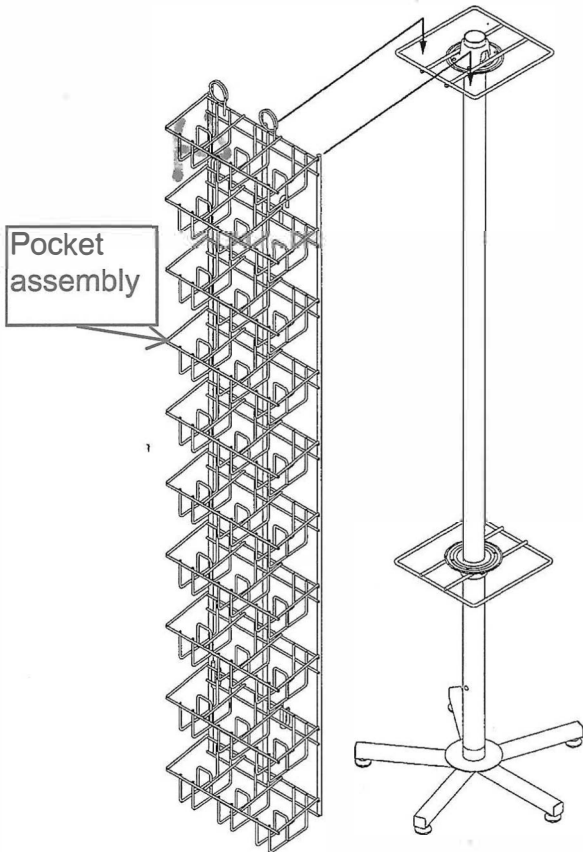


- ⑤ Drop the top hooks of the pocket assembly onto the top spinner platform.

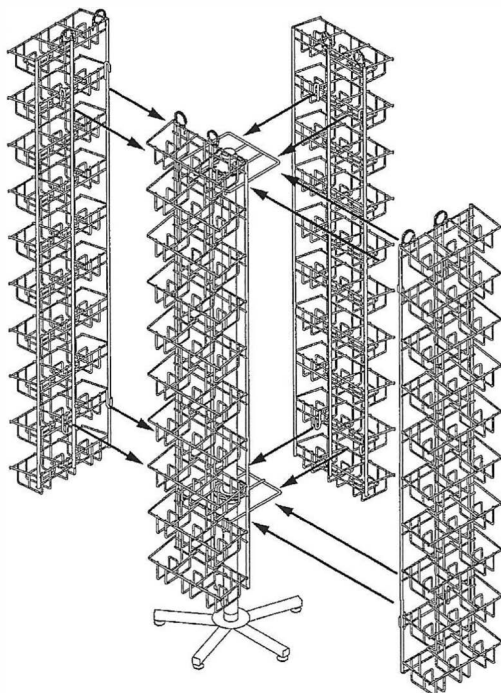

- ⑥ Hang the remaining three pocket assemblies.

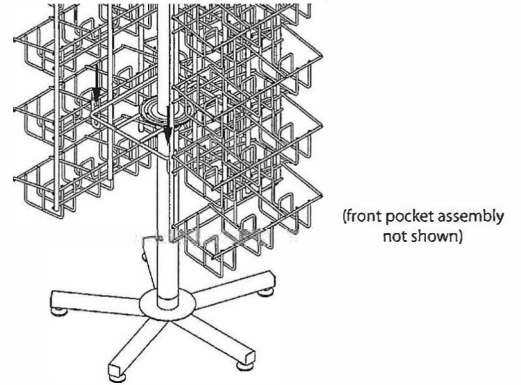


- ⑦ Remove cotter pin from lower spinner platform. Spinner platform will slide down and catch on lower hooks of each pocket assembly.

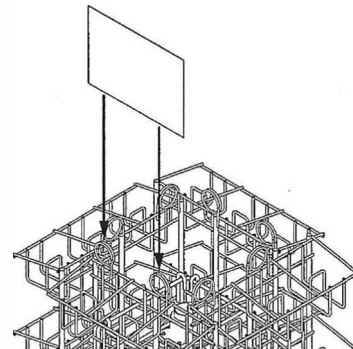

- ⑧ Place a sign in pigtail clips on top of pocket assembly. Repeat with 3 remaining signs.

Note: Sign holder now has slot instead of pigtail clips.

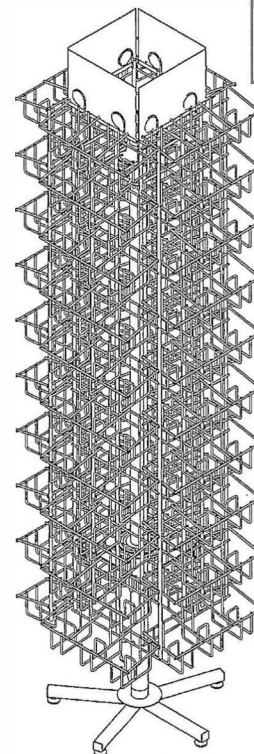

Display is now complete.