



ASSEMBLY GUIDE

A comprehensive guide to:


- Display Assembly
 - Parts
- Shipping Supplies
- Supplemental Materials

Rectangle 8 Panel Display

RECTANGLE 8 PANEL DISPLAY

ITEM 976

PARTS INCLUDED: (2) Tube Sides; (2) Bottom Support Tubes; (2) Middle Support Tubes; (2) Top Support Tubes; (4) Casters

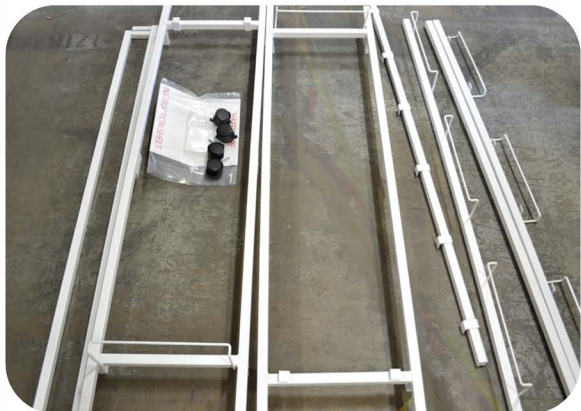

STEP 3

Attach middle support tube to tube side by inserting middle tube clip into tube side



STEP 5

Attach opposite side support tube to bottom tube clips and middle tube clips following steps 1-4, leaving insertion loose to aide in the process of adding the final top support bars



STEP 1

Attach bottom support tube to tube side by inserting into the clips of the tube side, with bottom racks facing to the outside




STEP 2

Repeat step 1 for opposite bottom tube clip on same tube side




STEP 4

Repeat step 3 for opposite middle clip on same tube side, leaving clips loosely inserted for now

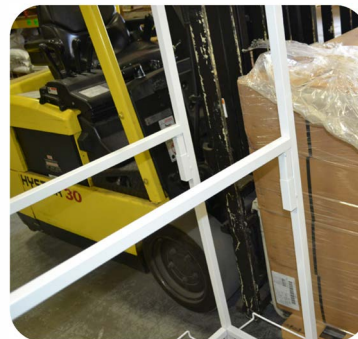

STEP 6

Attach top support tube to tube side by inserting top tube support into top tube side clip. Repeat process for opposite top support tube. Secure bottom, middle and top tube supports at this time by making sure they are pushed completely into clips

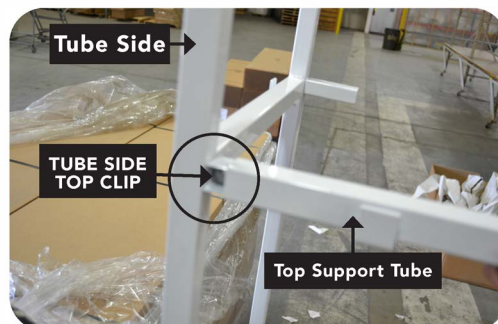

continued on page 00

RECTANGLE 8 PANEL DISPLAY

ITEM 976

continued from page 00

STEP 7

If using the (optional casters) included, on a soft surface, turn completed display on it's side and push the casters into the holes in bottom of feet



STEP 8

To add the display panels, locate the top cutout tabs and hook panel onto the top tube support hooks while resting the bottom of the panel inside of the bottom tube support rack as shown for all panels



Completed display showing one placed empty panel (without product and headers)



Example of completed 8-Panel Cardboard Display with Headers and product



LAKE VALLEY SEED

Assembly Instructions

PARTS

(2) side panels

(2) tubes (A) with wire base

(2) tubes (B) with hooks

(2) tubes C (center tubes)

step 1 Insert the tubes A onto the top side panel.

step 2 Insert the bottom tubes B onto the side panels.

step 3 Attach the center tubes into the side panels.

step 4 Hang the boxes onto the frame as shown.

